

AVVISO: PERICOLO DI ALLAGAMENTO Se la toilette è installata al di sotto della linea di galleggiamento, o può trovarsi in qualsiasi momento sotto il livello dell'acqua a causa di inclinazione o beccheggio, occorre installare dei sifoni appositamente posizionati. La non osservanza di questa importante norma potrebbe provocare l'allagamento della barca, e causare la perdita della proprietà e della vita.

ATTENZIONE: non collegare la toilette all'approvigionamento di acqua potabile dell'imbarcazione. Questo potrebbe causare la contaminazione dell'acqua potabile. Nel caso in cui si desideri adoperare acqua dolce per il risciacquo della tazza provvedere un serbatoio separato per l'acqua dolce per convogliare l'acqua esclusivamente al WC.

WARNING: FLOOD HAZARD If the toilet is installed below the waterline, or may be below the water level at any moment because of heeling or pitching, it must be fitted with properly positioned vented-loops. Failure to do so can result in flooding, which may cause loss of property and life **CAUTION:** never connect the toilet to the vessel's potable water, to avoid any risk of potable water contamination. If fresh water is preferred for flushing the bowl, provide a separate fresh water tank to supply water to the toilet only.

AVERTISSEMENT: DANGER D'INONDATION Au cas où la toilette serait installée au dessous de la ligne de flottaison, ou pourrait se trouver au dessous du niveau de l'eau à n'importe quel moment ensuite à inclination ou tangage, il faut la munir de boucles ventilées positionnées d'une manière adéquate. Si cette importante instruction n'est pas respectée il y a le risque d'inondation, qui peut causer perte de la propriété et de la vie.

ATTENTION: ne reliez jamais la toilette à l'approvisionnement de l'eau potable du bateau, pour éviter tout risque de contamination. Si on préfère de l'eau douce pour le rinçage de la cuvette, il est nécessaire de pourvoir un réservoir séparé pour l'eau douce et canaliser l'eau exclusivement à la toilette.

WARNUNG: UEBERSCHWEMMUNGSGEFAHR Wenn die Toilette unterhalb der Wasserlinie installiert ist, oder sich jederzeit unter dem Wasserspiegel wegen Neigung oder Stampfen befinden kann, ist es nötig dazu geeignete und angemessen positionierte Schwanenhalsventile zu montieren. Die Nichtbefolgung dieser sehr wichtigen Anweisung kann die Überschwemmung des Bootes verursachen und den Verlust des Eigentums und des Lebens als Folge haben.

VORSICHT: Schließen Sie nie die Toilette an die Trinkwasserleitung an, denn das könnte zu der Verseuchung des Trinkwassers bringen.



Falls Sie Süßwasser zur Schüsselpülung lieber haben, dann sorgen Sie für einen getrennten Trinkwasserspeicher woraus das Wasser nur an die Toilette geleitet werden kann.

AVISO: PELIERO DE ALAGAMIENTO: Si el inodoro es instalado al debajo del nivel de flotamiento o se puede encontrar en cualquier momento al debajo del nivel del agua a causa de la inclinación o de la ondulación del barco a esto ocurre instalar los sifones en la posición correcta.

Sino se observa esta regla importante esto puede provocar el alagamiento de la nave y la perdida de la vida.

ATTENCION: No colegar el inodoro a la fuente del agua potable de la nave. Esto puede causar la contaminacion del agua potable de enel caso de colegar el agua dulce para el enjuague del inodoro se nesecita instalar un contenedor del agua dulce, separado para mandar el agua directamente al inodoro.

- Le toilette elettriche possono essere installate sopra o sotto la linea di galleggiamento. L'altezza massima di auto-adescamento è di un 1,2 m. L'altezza massima di scarico è di 1,2 m.
- Electric toilets can be installed above or below the sea level. Maximum self-priming height is 1,2 m. Maximum discharge height is 1,2 m.
- Les toilettes électriques peuvent être installées au-dessus ou au-dessous de la ligne de flottaison. La hauteur d'amorçage maximale est de 1,2 m. La hauteur maximale de refoulement est de 1,2 m.
- Los inodoros eléctricos pueden instalarse por encima o por debajo de la linea de flotación. La máxima altura de autocébado es de 1,2 m., y la máxima altura de descarga es de 1,2 m.

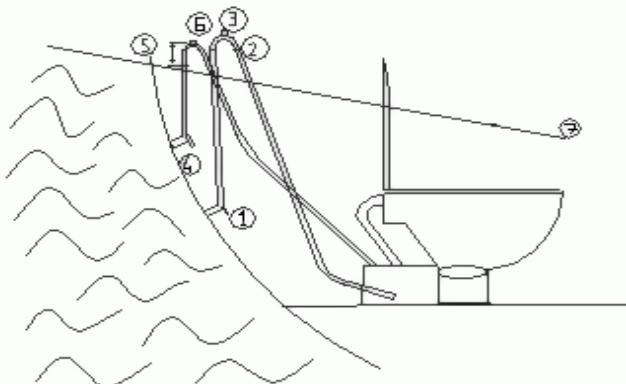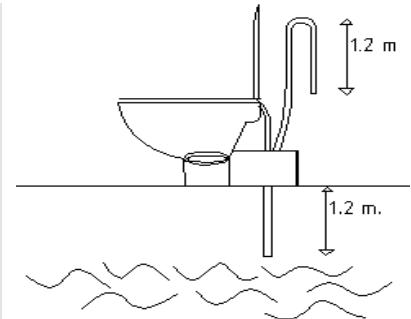

Toilette unterhalb der Wasserlinie

- 25 mm. oder 38 mm. Seeventil 2. Mindestens 20 cm.
- 25 mm. oder 38 mm. belüftbares Schwanenhalsventil
- 19 mm. Seeventil
- 19 mm. belüftbares Schwanenhalsventil ausgestattet mit Magnetventil
- Wasserlinie bei Krängung

Toilette al disotto della linea di galleggiamento:

- Presa d'acqua dal mare da 25 mm. o 38 mm
- Almeno 20 cm
- Anello di 25 mm. o 38 mm. con apertura di ventilazione
- Presa d'acqua del mare da 19 mm.
- Anello di 19 mm. con apertura di ventilazione completo di elettrovalvola
- Linea di galleggiamento durante l'inclinazione

Toilet below the waterline

- 25 mm. or 38 mm. sea-cock 2. At least 20 cm.
- 25 mm. or 38 mm. vented loop 4. 19 mm. sea-cock
- 19 mm. vented loop complete of solenoid valve
- Heeled waterline

Toilette au dessous de la ligne de flottaison

- Passe-coque de 25 mm. ou de 38 mm. 2. 20 cm. Minimum
- Boucle ventilée de 25 mm. ou de 38 mm 4. Passe-coque de 19mm.
- Boucle ventilée de 19 mm. complète de soupape électronique
- Ligne de flottaison maximale

Inodoro por debajo de la linea de flotación

- Grifo al mar de 25 ó 38 mm. 2. Por lo menos 20 cm.
- Vuelta ventilada de 25 ó 38 mm. 4. Grifo al mar de 19 mm
- Vuelta ventilada de 19 mm. con válvula solenoide

Toilette sopra la linea di galleggiamento:

- Presa d'acqua dal mare da 19 mm. 2. Valvola di ritegno d'immissione
- Rialzo di 20 cm. sopra la base per trattenere l'acqua nella tazza
- Presa d'acqua dal mare da 38 mm.

Toilet above the waterline

- 19 mm. sea-cock 2. Inlet non-return valve
- 20 cm. rise above the base to retain water in the toilet bowl 4. 38 mm. sea-cock

Toilette au dessus de la ligne de flottaison


- Passe-coque de 19 mm. 2. Clapet anti-retour
- Soulèvement de 20 cm. au dessus de la base pour maintenir l'eau à l'intérieur de la cuvette 4. Passe-coque de 38 mm.

Inodoro por encima de la linea de flotación

- Grifo al mar de 19 mm. 2. Válvula unidireccional de entrada

Toilette oberhalb der Wasserlinie

- 19 mm. Seeventil 2. Rückschlagventil im Spülzulauf
- 20 cm. über der Unterkante, um Wasser in der Schluessel zu behalten 4. 38 mm. Seeventil

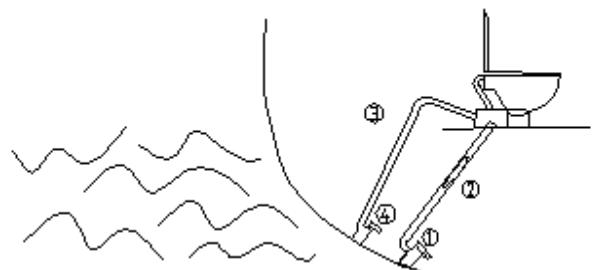

MOUNTING: Before starting the assembly, read the complete mounting instruction first.

You need:

Stainless steel bolts: 4 pcs, 8mm (5/16") diameter of length to suit the thickness of the mounting surface.

Stainless steel nuts: 4 pcs preferably self-locking. If you do not use self-locking nuts you need to add locking compound on the screws/nuts.

Stainless steel washers: 4 pcs.

Drill: Diameter 9mm.

Silicone sealant, white.

If you do not use self-locking nuts, you will need some nutlocking compound

Put the toilet in the selected position. Using the holes in the base as a guide, mark the positions for the 4 bolt holes on the mounting surface. Remove the toilet and drill 4 vertical holes, with a diameter of 9mm, through the mounting surface.

Apply the white silicone sealant to the outer rim of the bottom base.

Put the toilets on its place and tighten the fastenings securely. If you are not using self-locking nuts, use nutlocking compound.

Use the sealant around the base, towards the floor.

OPERATING INSTRUCTIONS

The toilet is one of the most used pieces of equipment on your boat. Correct operation of the toilet is essential for the safety and comfort of your crew and craft.

Using the toilet

Control panel

The panel controls the rinse and the discharge, by one button. Button 1, One function, discharge and rinse.

Normal Use

Ensure that the inlet and outlet valves are open.

Push the button switch to operate flush until the bowl is thoroughly rinsed and the discharge pump has ejected the water from the base of the bowl.

If the toilet has not been used for a while, and the bowl is dry, it's recommended to operate the pumps for a few seconds so the bowl gets wet. This is for preventing the toilet paper to become compact at the bottom of the bowl.

The toilet can macerate organic waste and toilet paper, but it can not destroy rugs, sanitary nappies or hard and solid objects from different nature.

If the pump does not discharge and the bowl begins to fill, partially close the toilet intake valve until the bowl is completely empty. Operate than for a few seconds with both valves open, so that the toilet and the whole discharge system may be completely emptied out.

After each operation, close both inlet and discharge valves.

To drain for winterization, close the inlet valve and operate for a few seconds until water is completely empty.

AFTER USE:

- SHUT BOTH SEACOCKS

NOTE: Do not put any of the following into the toilet: Sanitary Towels, Wet Strength Tissues, Cotton Wool, Cigarettes, Matches, Chewing Gum or any solid objects, Petrol, Diesel, Oil, Solvents of any kind or water more than hand warm.

A rule of thumb: Do not put anything in the toilet unless it has passed through your body, except for toilet paper.

Hazard Risk:

ACCIDENTAL DAMAGE. If the toilet is connected to ANY through-hull fittings that are below the waterline at any time, and if the toilet or pipework is damaged, water may flood in, causing the craft to sink, which may result in loss of life. Therefore, after every usage; both seacock (or secondary valves) MUST be shut. Whenever your craft is unattended, even if only for a very short period of time, both seacock (even if secondary valves are fitted) MUST be shut. Ensure that ALL users understand how to operate the toilet system correctly and safely, including seacock and secondary valves.

Take special care to instruct children, the elderly and visitors ABSOLUTELY SHUT SEACOCKS!

Cleaning

A regular flushing with clean (sea)-water represents one of the most effective methods to keep the toilet clean and good smelling.

To clean the bowl, use any liquid or cream ceramic cleaner.

To clean the rest of the toilet, including the seat and lid, use a non-abrasive liquid cleaner Polish with a dry cloth only.

To disinfect the toilet, use a liquid disinfectant diluted in accordance with the manufacturer's instructions. It is possible to apply it to all parts of the toilet using a sponge or soft brush as necessary.

After applying any cleaning or disinfecting agent, always flush well. • DO NOT ALLOW THESE AGENTS TO STAND IN THE SYSTEM

Electric Connections



Connect the wires from the panel as follows: Red wire panel to battery (+) with proper fuse . Other red wire to re wire to pump

Connect the wires from the pump as follows: Black wire motor to battery (-)

To install the switch panel, use the template or dimensions from the template. Also, drill four appropriate sized holes for the fasteners selected to secure the switch panel to its mounting surface.

Wire size per feet and meter of run

Voltage	Fuse size	0'-10'	10'-15'	15'-25'	25'-40'	40'-60'
0m-3m	3m-4.6m	4.6m-7.6m	7.6m-12.2m	12.2m-18.3m		
12V	25A	#14 2.5 mm ²	#14 2.5 mm ²	#12 4 mm ²	#10 6 mm ²	#8 10 mm ²

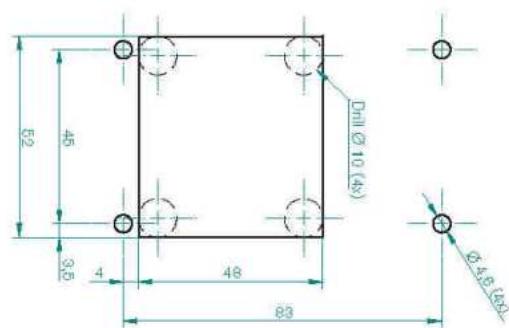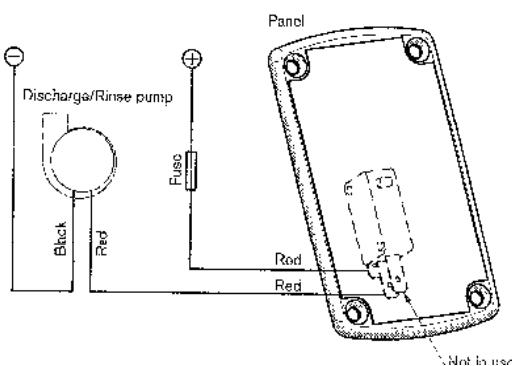

ELECTRIC MARINE TOILET

This toilet model can be installed either above or below the water line. The toilet is equipped with a self-priming linear pump, which can work up to 3 meters. Discharge is made by means of the macerator pump, which is able to operate up to 2 meters in height. It can be easily mounted through 4 holes situated at the base of the macerator pump.

MOUNTING INSTRUCTIONS

WATER CONNECTIONS FOR INSTALLATIONS ABOVE THE WATERLINE

For a better functioning of the pump and to avoid water contamination, the fitting of a non-return valve at the end of the hose, next to the tank or the through-hull device is suggested. Connect the toilet inlet terminal to the water supply with a flexible hose of 19 mm. Connect the discharge terminal to a waste tank or another discharge system with a flexible hose of 1". To retain some water in the bowl, make a siphon on the discharge hose, at 20 cm. above the base of the bowl. Be sure that all connection are airtight and that the hose has no chokes or narrow bends.

WATER CONNECTIONS FOR INSTALLATIONS BELOW THE WATERLINE

Disconnect the hose between the pump and the bowl. Replace it with another hose of suitable length that can make a siphon at 20 cm. above the water line. The same procedure is required for the discharge line, taking also into account the eventual variations and trim adjustments that can happen during navigation. Connect the water supply to the inlet terminal with a flexible hose of 19 mm. and connect the discharge terminal to a flexible hose of 1". Make sure that all connections are airtight and that the hose is showing no chokes or narrow bends.

ELECTRIC CONNECTIONS

For a better functioning of the toilet, the connections have to be made with the correct size wires (see the table below). The circuit for the toilet power supply has to be independent and cannot be used for another appliances. Connect the battery positive terminal to a fuse of adequate capacity load. The fuse has to be connected near the battery to shelter the feeding line in case of fault. Thus, connect the fuse to one terminal of the switch control panel. The other switch control terminal has to be connected to the positive red colour wire of the toilet motor. Connect the negative black wire of the toilet motor to the negative terminal of the battery.

REMARKS : A correct motor polarity (red to positive and black to negative) is indispensable. Reverse polarity can damage the motor, thus voiding the warranty. For a correct functioning of the toilet a full voltage to the motor is necessary.

ELECTRIC SPECIFICATIONS

VERY IMPORTANT

Wire size per mmq.of run

VOLTAGE	AMP.DRAW.	FUSE SIZE	6-10 mm.	3-6 mm.	0-3 mm.
32 Volts d.c.	6	10	8	6	4
24 Volts d.c.	8	20	14	10	8
12 Volts d.c.	16	25	16	12	10

OPERATING INSTRUCTIONS : Insure that the inlet and the outlet valves are open. Push the button switch to operate flush until the bowl is thoroughly rinsed and the discharge pump has ejected the water from the base of the bowl. If properly used, the electric marine toilet will provide years of trouble-free service. It can macerate organic waste and toilet paper but it cannot destroy rugs, sanitary nappies or hard and solid objects of different nature. If the pump does not discharge and the bowl begins to fill, partially close the toilet intake valve until it is completely emptied. Operate then for a few seconds with both valves open, so that the toilet and the whole discharge system may be completely emptied out. After each operation close both the inlet and the discharge valves. To drain for winterisation, close the inlet valve and operate for a few seconds until water is completely discharged.

WARRANTY

Products are guaranteed two years.

No warranty will be recognized in the following cases:

if the bowl is broken


if the fitted instructions regarding the electrical system and the directions for use have not been properly followed

Warning: the use of strong detergents to clean the toilet is forbidden, as these products stay on the inside of the system and burn the pump rubber seals through. Eventual traces found in the claimed goods will invalidate the warranty.






TO TAKE ADVANTAGE OF WARRANTY, ALL ARTICLES MUST BE SENT BACK COMPLETE WITH ASSEMBLING INSTRUCTIONS AND EVIDENCE OF PURCHASE.

Dimensions

Description	A	B	C	D	E
Std. electric compact, 12V	345	892	373	209	218
Std. electric compact, 24V					
Std. electric comfort, 12V	366	947	380	290	275
Std. electric comfort, 24V					

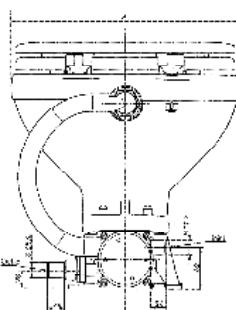


Description	A	B	C	D	E	F
Laguna electric 12v.	340	411	359	248	316	190/205

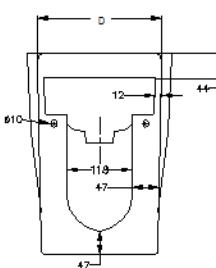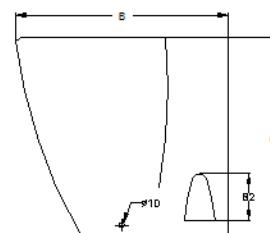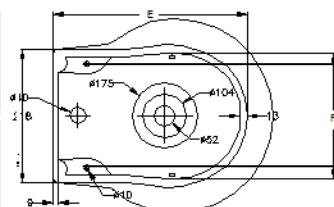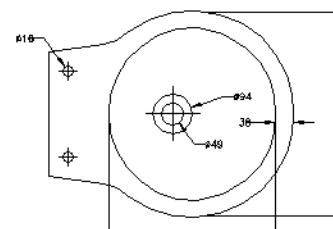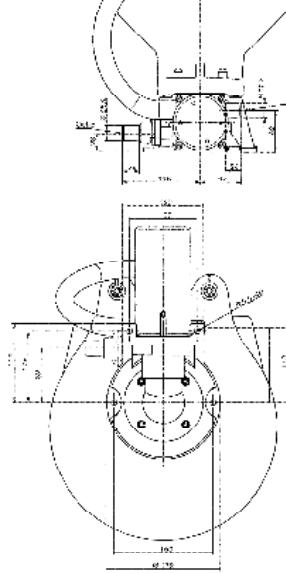


COMPACT / COMFORT MODEL


EXPLODED VIEW

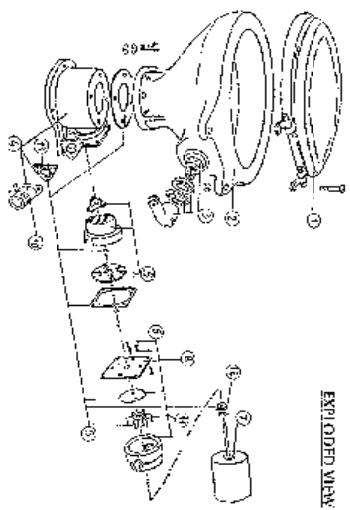

SPARE PART LIST	
01	550000000301
02	550000000002
03	550000000003
04	550000000004
05	550000000005
06	550000000006
07	550000000007
08	550000000008
09	550000000009
10	550000000010
11	550000000011
12	550000000012
13	550000000013
14	550000000014
15	550000000015
16	550000000016
17	550000000017
18	550000000018
19	550000000019
20	550000000020
21	550000000021
22	550000000022
23	550000000023
24	550000000024
25	550000000025
26	550000000026
27	550000000027
28	550000000028
29	550000000029
30	550000000030
31	550000000031
32	550000000032
33	550000000033
34	550000000034
35	550000000035
36	550000000036
37	550000000037
38	550000000038
39	550000000039
40	550000000040
41	550000000041
42	550000000042
43	550000000043
44	550000000044
45	550000000045
46	550000000046
47	550000000047
48	550000000048
49	550000000049
50	550000000050
51	550000000051
52	550000000052
53	550000000053
54	550000000054
55	550000000055
56	550000000056
57	550000000057
58	550000000058
59	550000000059
60	550000000060
61	550000000061
62	550000000062
63	550000000063
64	550000000064
65	550000000065
66	550000000066
67	550000000067
68	550000000068
69	550000000069
70	550000000070
71	550000000071
72	550000000072
73	550000000073
74	550000000074
75	550000000075
76	550000000076
77	550000000077
78	550000000078
79	550000000079
80	550000000080
81	550000000081
82	550000000082
83	550000000083
84	550000000084
85	550000000085
86	550000000086
87	550000000087
88	550000000088
89	550000000089
90	550000000090

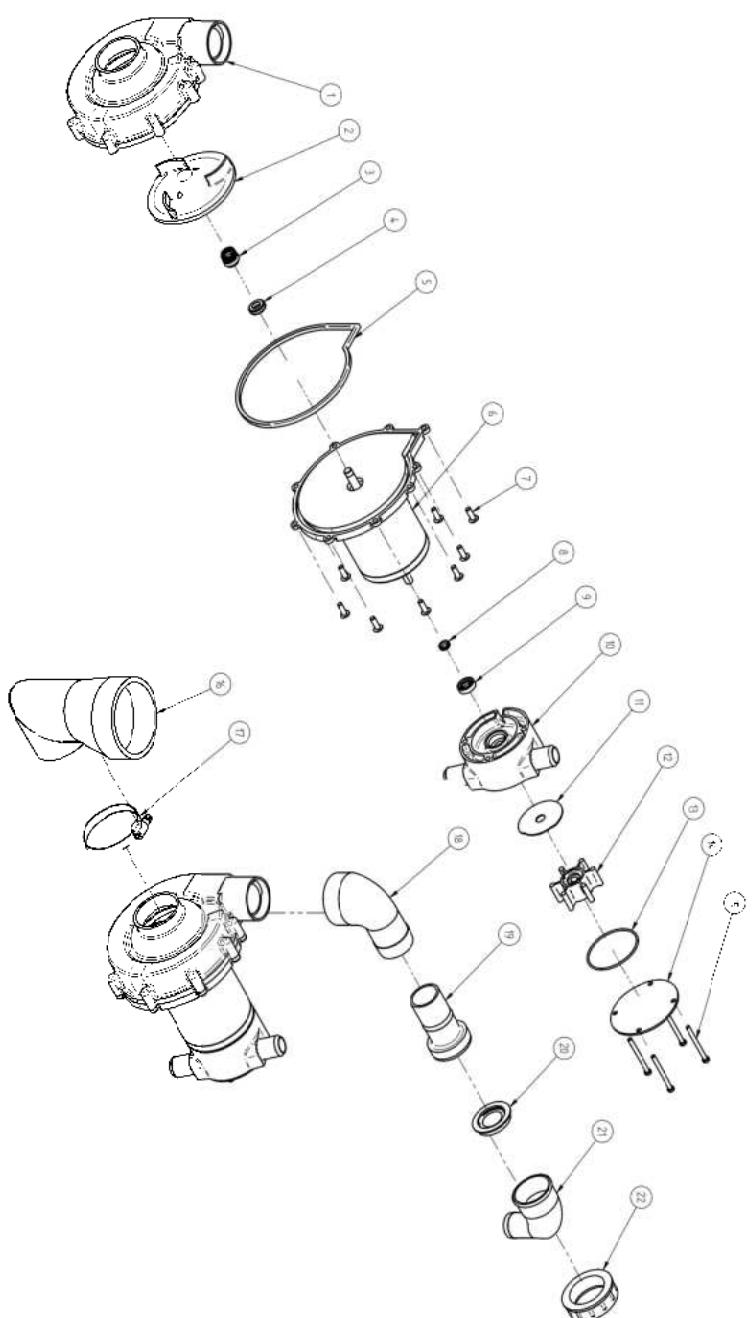

LAGUNA ELECTRIC MODEL

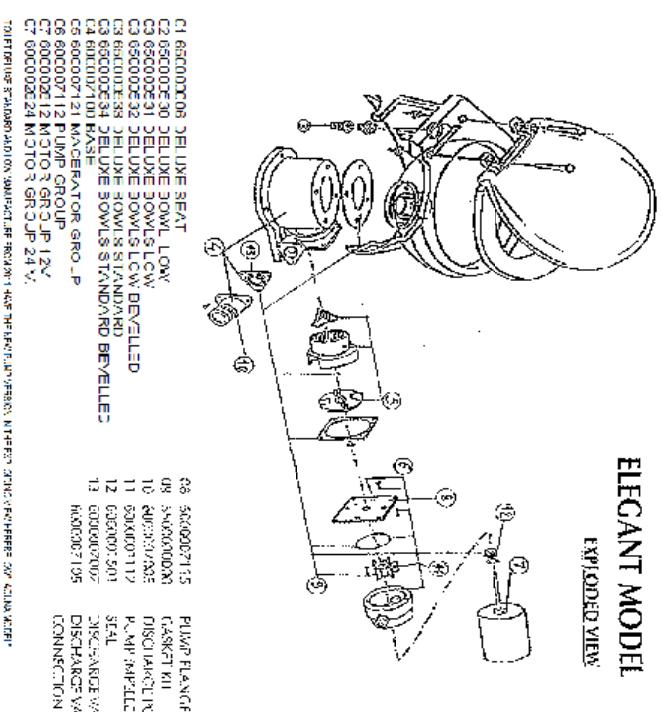

ELEGANT MODEL

EXPLODED VIEW

ART. NUMBER / AÑO / SPANNING	ART.	ART.
BASE GROUP NEW HYDRO-VACUUM PUMP CD 5500019008	1	PUMP BODY
MOTOR GROUP 12V/24V CD 5500019010	2	IMPELLER
MOTOR GROUP ELECTRIC TOILET CD 5500019010	3	MECHANICAL SEAL
OULTE DISCHARGE KIT CD 5500019005	4	MECHANICAL SEAL SET
OUTLET ELBOW CD 5500019006	5	PURGING
	6	SCREW
	7	MOTOR
	8	SEAL
	9	IMPELLER
	10	PUMP BODY
	11	MECHANICAL SEAL
	12	RUBBER IMPELLER
	13	O-RING
	14	DISCHARGE VALVE
	15	DISCHARGE CONNECTION
	16	DISCHARGE CONNECTION
	17	DISCHARGE CONNECTION
	18	DISCHARGE CONNECTION
	19	DISCHARGE CONNECTION
	20	DISCHARGE CONNECTION
	21	DISCHARGE CONNECTION
	22	DISCHARGE CONNECTION